

These instructions are for remote number **SRC-300** used with the Nextlevel Digital TV box. Your remote control needs to be programmed to operate properly, please follow instructions below to program your remote control to operate your TV along with your digital TV box.

Does the remote turn on/off the TV and control volume?

If **NO**, program remote using this procedure:

- a. Manually turn on TV.
- b. Press and Hold the LED button until light flashes.
- c. Press the RECORD button (red dot). The LED light will stop blinking and stay solid.
- d. Press the POWER button (light will stay solid).
- e. Press and release Up Arrow repeatedly. Each time you press the Up Arrow, a new code is tried. When the TV turns off, the correct code has been found. Then press Select to save code.

Note: Don't press the Up Arrow too fast or you will save the wrong code, if this happens repeat steps a-e.

If you are still having problems with your remote, please contact Venture Communications 24-hour digital TV support at -877-235-1824.